



sE Electronics

X1 USB Driver Installation Instructions

For Mac:

- sE X1 USB is plug-and-play - therefore, simply plug the microphone into a USB 2.0 or 3.0 port on your Mac.
- To check that the X1 USB is working, check for the device under System Preferences > Sound > Input & Output tabs.
- Under the Input tab with the X1 USB selected, you will see a signal level in the meter when you talk into the microphone.
- You can set the sample rate up to 192kHz, depending on the audio software you are using.

For Windows:

- Please visit <http://www.seelectronics.com/se-x1-usb-mic> and download the sE X1 USB Driver for Windows.
- Run the driver download: se-x1-usb-driver-windows and follow the instructions to install the driver, plugging in the sE X1 USB when prompted.
- Continue to follow the instructions to install the driver.
- We recommend restarting your computer once the installation is complete.
- Within your audio recording software, go to your audio preferences and select ASIO XMOS USB Audio 2.0 as your input and output devices.
- You can set the sample rate up to 192kHz, depending on the audio software you are using.

For further assistance, please contact support@seelectronics.com.